

# MS70 USER MANUAL

## 1 PRODUCT PROFILE

This device is a new Android-based vehicle trouble diagnostic device developed for Internet applications. It inherits from OBDSTAR advanced diagnosing technology and it is characterized by covering wide range of vehicles, featuring powerful function, and providing precise result. Through motorcycle diagnostic OBD connector and variant mobile intelligent terminals, it achieves motorcycle trouble diagnosis for full car model and full system vehicle. Meanwhile, taking advantage of mobile Internet, this device integrates all product resources and service of OBDSTAR.

## 2 FEATURES

1. Diagnostic function:
  - Diagnose the electronic control system of prevailing vehicle models covering Asian, European, American and Chinese. Diagnosis functions include: Read DTCS, Clear DTCS, Read data stream, Special functions etc.
  - Specially designed for Android platform with clear and user-friendly interface;
2. Support Center: equipped with powerful database. Large number of videos help users to operate device easily.
3. Personal center:  
User information and the device' s configuration information.
4. Upgrade: built-in WIFI mode can realize application downloading and diagnostic function by one key upgrade.
5. System setting: set VCI formation, language, unit, Workshop information, About and Network test etc.
6. Remote assistance: achieve remote assistance by this function.

## 3 KNOWLEDGE OF THIS DEVICE

### 3.1 The whole set

This device is composed of the tablet computer, main test cable and kinds of cables.

### 3.2 The tablet computer

front view



reverse view




#### 4 TECHNICAL PARAMETERS

- Operation system: Android 5.1.1
- CPU: RK3128 Quad-Core , ARM Cortex A7@1.2Ghz
- Battery: 2600mA, rechargeable polymer lithium battery
- Extension memory card: 32G Micro SD (TF) card supported
- Memory capacity: 16GB

- LCD: 7.0 inches
- LCD resolution: 1024\*600
- Touch screen: Capacitive touch screen
- Wi-Fi: supported
- Working temperature: -20°C~55°C ( 14°F~131°F )
- Storage temperature: -20°C~70°C ( -4°F~158°F )
- Weight: about 1.3kg
- Dimension: 243mm\*148\*mm\*36mm

## 5 ACCESSORIES ( Standard Configuration )

### 5.1 Main test cable

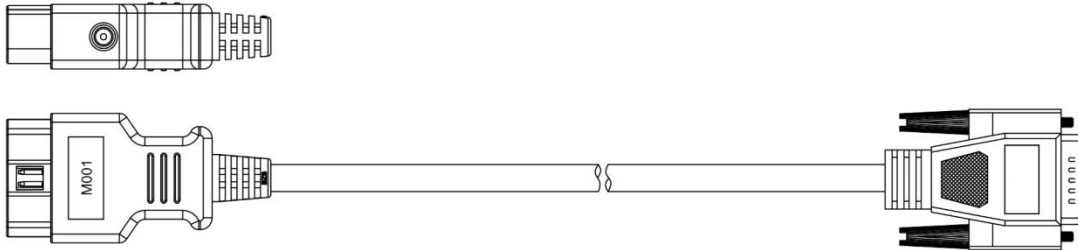


### 5.2 Other Connectors

Other connectors are used to connect the diagnosis socket of non OBD II vehicles. To choose the connector according to the vehicle brand and models. Common connectors are as below:

 M001/M001A Main Cable(主線)	 M002 Power Cable(取電電源線)	 M002A GND(取電搭鐵線)	 M002B MV AGUSTA Power Cable (奧古斯塔取電線)	 M003A Multi functional jumper (万能跳線)	 M004/N004 APRILIA(阿普里利亞)CFMOTO 寶沃(DUCATI)杜卡迪(HONDA 本田)KTM 寶吉(GIARDINI)VESPA YAMAHA(雅馬哈)	 M005 KAWASAKI(川崎)	 M006 KAWASAKI(川崎)
 M007 BETA(貝塔)	 M008 KAWASAKI(川崎)	 M009 KAWASAKI(川崎)	 M010 MOTO MORINI	 M011 KAWASAKI(川崎)	 M012/M012A/N012A SUZUKI(鈴木)	 M013 LIFAN(力帆), SUZUKI(鈴木)	 M014 SUZUKI(鈴木)
 M015/M015A/N015A HONDA(本田)HONDA MONTESSA(孟泰莎)	 N016 TGB	 M018A YAMAHA(雅馬哈)	 M019/N019 KTM	 M020 AEON(奧恩)BENELLI(貝納利) BENELLI DSK(貝納利)	 M021/M021A/N021A ALONZO(阿隆佐)BENELLI(貝納利) BENELLI DSK(貝納利)ZONGSHEN (宗申)ZONGSHEN(宗申) ZONGSHEN(宗申)ZONGSHEN(宗申) ZONGSHEN(宗申)ZONGSHEN(宗申) ZONGSHEN(宗申)ZONGSHEN(宗申)	 M022 BENELLI(貝納利) BENELLI DSK(貝納利)	 M024 SYM(三陽)
 M026/N026 SYM(三陽)	 M027/N027 KYMCO(光陽) KAWASAKI(川崎)	 M028 PGO(比雅久)	 M030 HARTFORD(哈特佛)	 M034 HARLEY-DAVIDSON(哈雷)	 M037 DUCATI(杜卡迪)	 M038/N038 MV AGUSTA(奧古斯塔)	 M039 KAWASAKI(川崎)IMMO(伊摩) YAMAHA(雅馬哈)IMMO(伊摩)
 M040 BMW(寶馬)	 M041/N041 EURO V(歐V)雅馬哈	 M042 INDIAN(印地安) VICTORY(勝利)	 M043/N043 BRP(波西尼)	 M045 SHINERAY(新日)	 M046 BENELLI(貝納利)-ABS	 M047 VESPA(偉士柏)	 M048 APRILIA
 M050/N050 LANMOTO(藍馬)	 M051/N051 ROYAL ENFIELD	 N052 ROYAL ENFIELD	 M053 HONDA(本田)IMMO(伊摩)	 M054 SUZUKI(鈴木)IMMO(伊摩) YAMAHA(雅馬哈)IMMO(伊摩)	 P001 IMMO(伊摩)KIT(伊摩)	The above is a list of all motorcycle connectors supported by this product. The number of standard connectors varies with different product models, please refer to the product packing list for details! The company has the final interpretation right. 上述列表為目前所有摩托車配件列表，產品型號不同所接線頭數目會不同，具體以產品包裝為準！本公司擁有最終解釋權。	

### 5.3 Others accessories

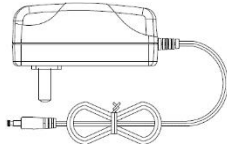

DC Power Adapter (Output DC 12V/2A)

To power up the tablet via connecting with outside power Supply.

## 6 CHARGE THIS DEVICE

1. Connect the included USB cable with charger.
2. Plug the charger into AC outlet.
3. When it connects to charger, battery logo indicates



, it indicates that the battery is in charging.

4. When battery logo changes into



, it indicates that the battery is fully charged and then disconnect charger from AC outlet.

5. Unplug USB cable on the charger from this device.



## 7 USING BATTERY

- If the battery keeps unused for a long time or battery is completely discharged, it is normal if it cannot be turned on while being charged. Please charge it for a period and then turn it on.
- Using data service will cause more power consumption and shorten the stand by time.
- The charging time of battery varies with temperature condition and battery consumption status.
- While this device has low battery, a beep will sound. If it is very low, this device will be switched off automatically.

Note: Do one of the followings to save power:

1. When this device keeps unattended, press POWER key to turn off the LCD.
2. Shorten the standby time: Enter main menu, choose "Settings" > "DEVICE" > "Display" > "Sleep" to select a shorter standby time.
3. Decrease the brightness of LCD display: Enter main menu, choose "Settings" > "DEVICE" > "Display" > "Brightness", and then drag the slider to adjust it.
4. Change "Live wallpaper" into "Gallery".
5. Set Bluetooth off: Enter main menu, choose "Settings" > "Wireless & Network" > "Bluetooth", and then toggle the switch to OFF.
6. Press VOLUME key to decrease the volume.

## 8 POWER ON/POWER OFF THIS DEVICE

### 8.1 Power on

Press and hold Power button for three seconds to turn on this device.







Note : Set date, time and time zone.

### 8.2 Power off

Press and hold Power button for three seconds to turn off this device.

## 9 ABOUT DESKTOP

The screen is shown as blow:

- A. Print screen  : make a quick screenshot and save it to gallery
- B. Back button  : go back to previous interface or exit program.
- C. Home button  : return to the desktop
- D. Touch screen menu button  : select desired item
- E. DP button  : enter diagnose and program interface
- F. VCI button  : enter system settings

## 10 CUSTOMIZE YOUR DESKTOP

### 10.1 Add items on the desktop

On the main menu, hold and press the desired item, the system will automatically enter the desktop and place the icon into the circle.

Hint: If many applications occupy the desktop, hold and press the desired one to move it to other extension desktop.

### 10.2 Move items on the desktop

1. Hold and press the item to be moved.
2. After a movable circle appears on the screen, drag it to the target location.

### 10.3 Delete items on the desktop

1. Hold and press the desired item, "X Delete" appears in the upper middle of the screen.
2. Drag on the item to "X Delete" .

3. When the item and icon turn red and then release it.

#### **10.4 Change your wallpaper**

1. Hold and press a blank area on the desktop, a pop-up wallpaper will be shown on the screen.
2. Choose desired wallpaper.
3. Click upper left corner “√ to set wallpaper” .

#### **10.5 Create a folder on the desktop**

1. Drag one icon to another icon, the system will create a folder.
2. Input the folder name.

### **11 ON USING TOUCH SCREEN**

- Tap: use your finger to tap desired items to confirm or open it.
- Long-press: press and hold the current interface, icon or input field to open the available operation options.
- Slide: use your finger to slide the screen horizontally or vertically.
- Drag: hold and press the desired item, then drag it to any location.

### **12 LOCK&UNLOCK**

#### **12.1 Lock the screen**

- When the device is ON, press POWER key to lock the screen.
- The system will lock the screen automatically after this device remains idle for a long time.

#### **12.2 Unlock the screen**

Press POWER key to activate the screen and then drag the lock to “Unlock position.”

### **13 NOTIFICATION BAR**

The notice bar is used to display some activities, messages to remind and inform users.

#### **13.1 Turn on the notification panel**

1. When a new notification icon appears on the status bar, slide the status bar downwards to open it.
2. In the notification panel, click the desired notification item to open it.

#### **13.2 Turn off the notification panel**

When the notification panel is opened, click on the blank space of the screen and the notification panel will automatically retract.

## 14 INPUT METHOD

Set input method :

Enter main menu and then select "Settings" -> "Language and keyboard" to choose desired input method.

The default input method, Sogou input can support powerful word stock engine, Intelligent Sogou input and multiple keyboard mode.

Android keyboard and Google input method and make input easier.

To start text input mode, please click any text input entry.

## 15 HOW TO SET AS AIRPLANE MODE

According to the regulations of some countries or areas, PC device must be turned off before boarding on the airplane.

The way to disable functions of this device is to set it as airplane mode. In this mode, all wireless radio waves will be off, including mobile network, Bluetooth and WLAN.

Do one of the followings to enable or disable airplane mode:

Press POWER key and choose "Airplane mode" from the pop-up option menu.

Access the main menu, and choose "Settings" > "WLAN" > "More..." > "Airplane mode".

## 1 CONNECT VCI CONNECTOR

Procedure to connect VCI connector:

1. Locate motorcycles' diagnostic socket. The connectors of the diagnostic socket of different models are inconsistent. You need to use the corresponding model adapter. You can check the approximate location of the model adapter in the diagnostic bitmap in the software data.
2. Plug the diagnostic connector of this device into the diagnostic socket.


## 2 DIAGNOSIS FLOWCHAT

For new users, please follow the 3.1 to get familiar with and start using this device.

Connect the diagnostic connector ->user registration->user login->download or upgrade software->select function or vehicle type->proceed diagnosis


### 3 PERSONAL CENTER

Used to set up and manage account details, and you can view the dealer information.

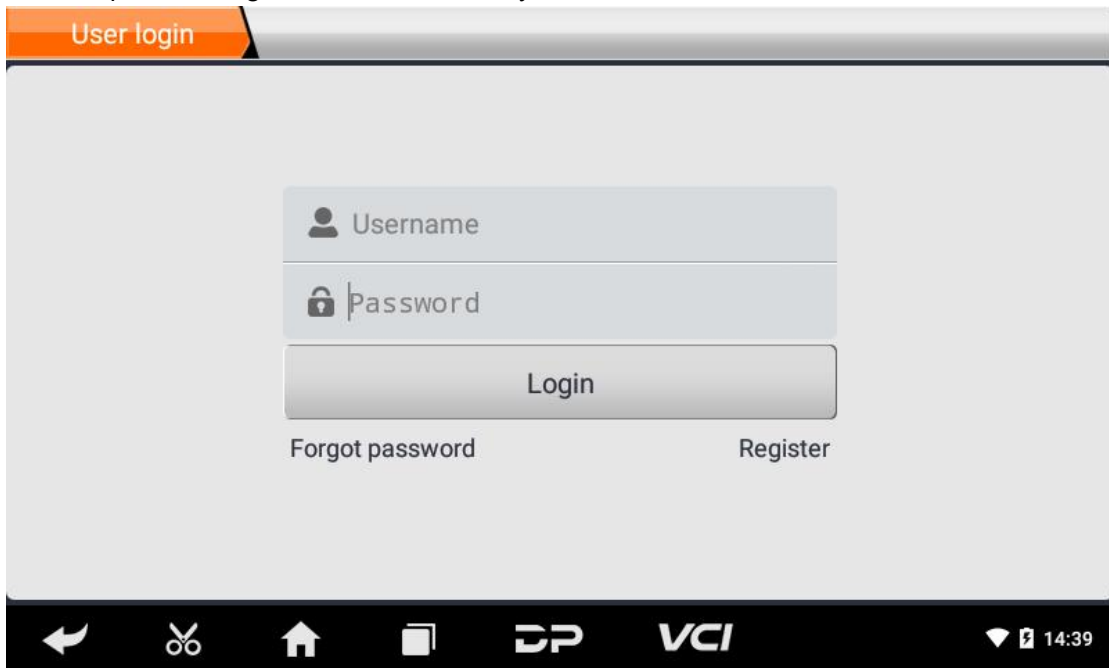


#### 3.1 User registration

Enter the Personal Center interface, display the login interface, click the "Register" button in the lower right corner to enter the user registration interface. As shown:

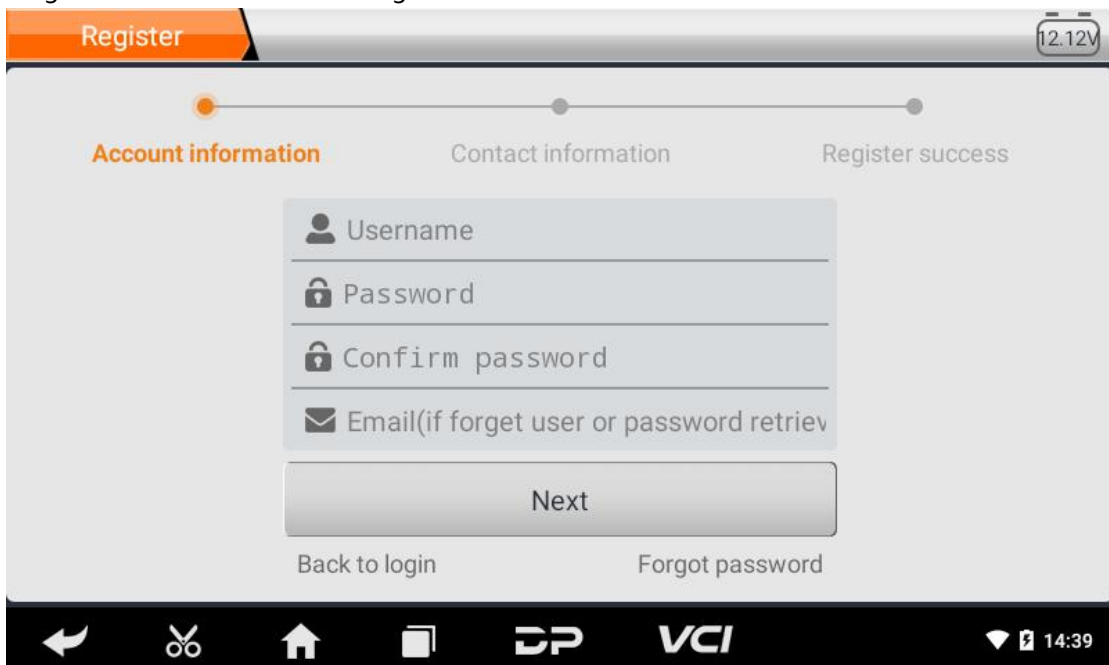



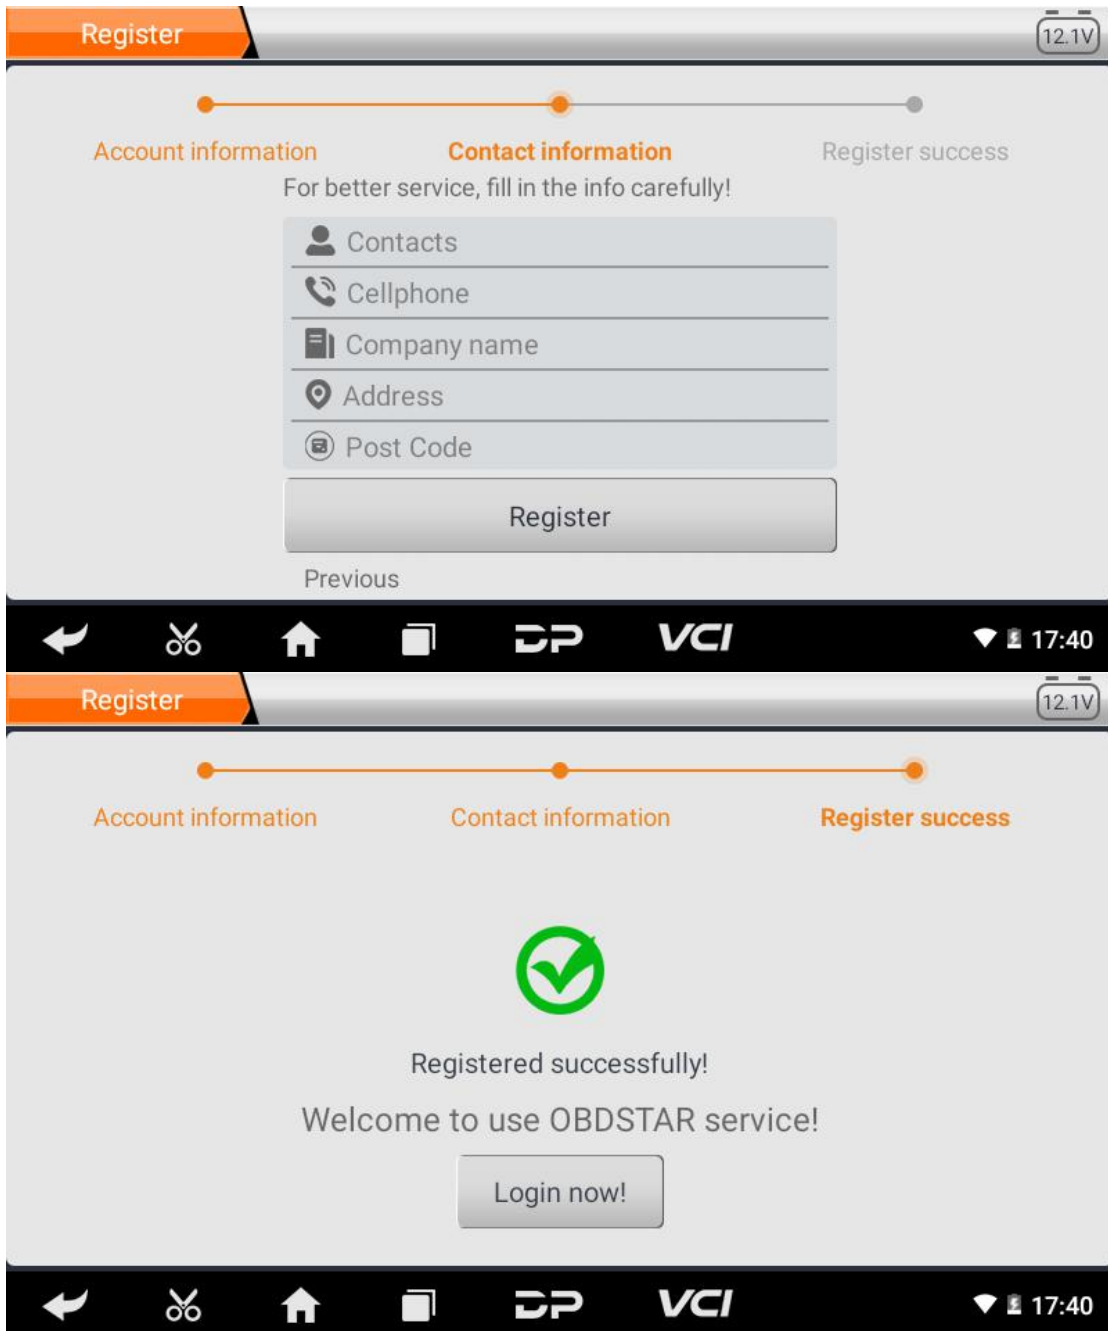


Fill in the information in each field. After that, the registration is successful, click "Login now!"  
If you have registered to be a member, click "User login" to enter user login page, as following picture shown:




### 3.2 User login

After the registration is completed, fill in the account number and password and click login:

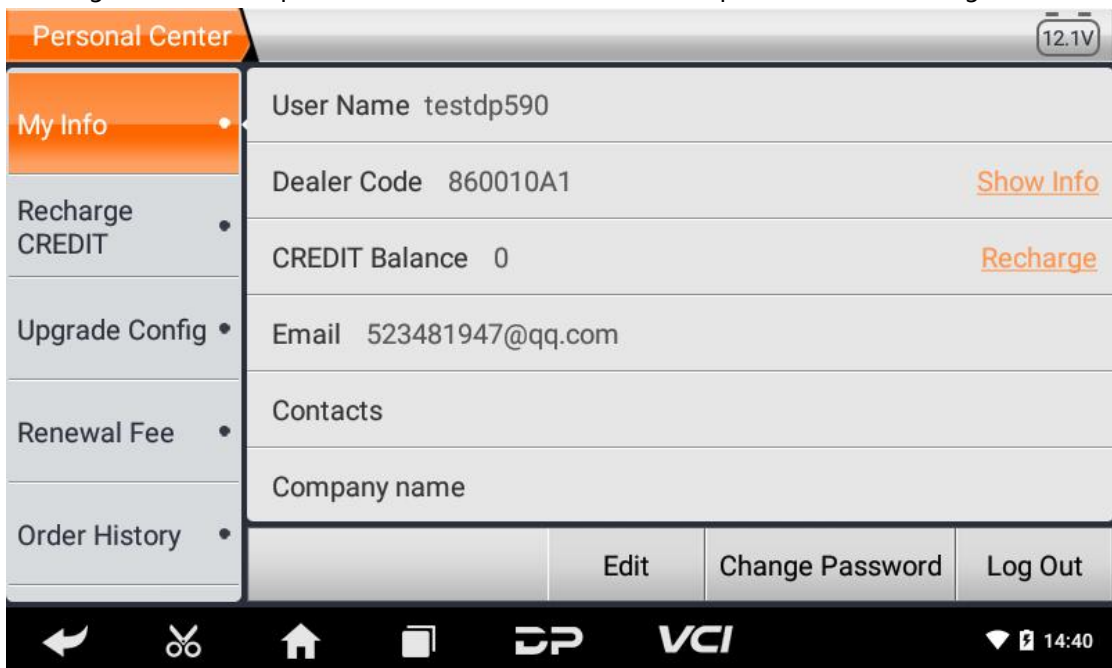


Display personal basic information and modify information and password.

### 3.2.1 Modify information

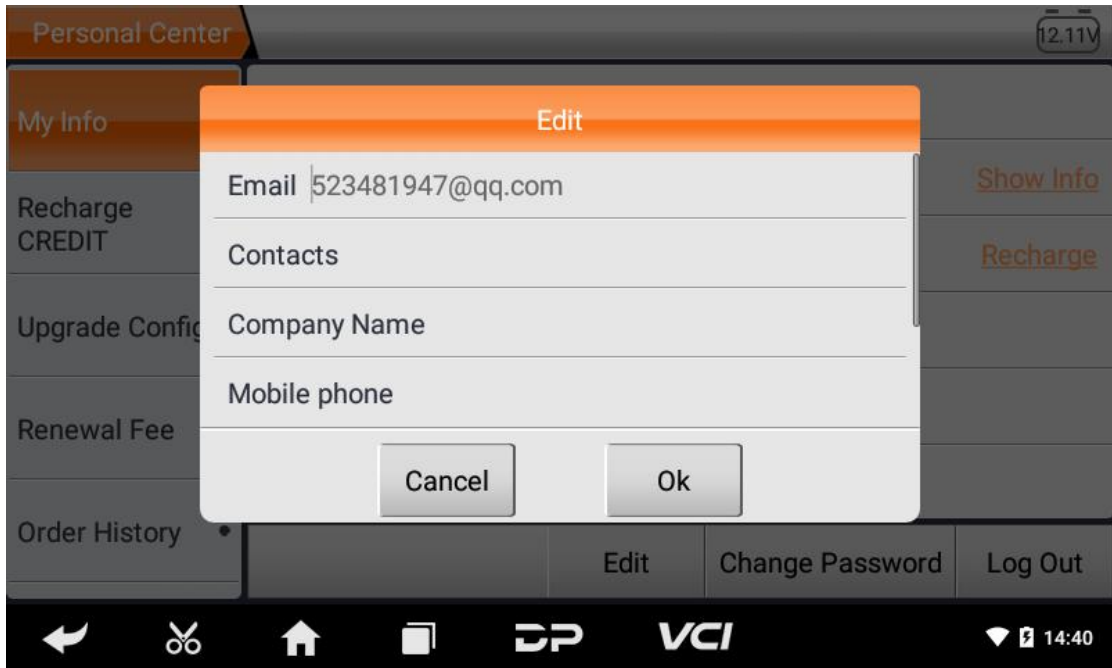


### 3.2.2 Change password

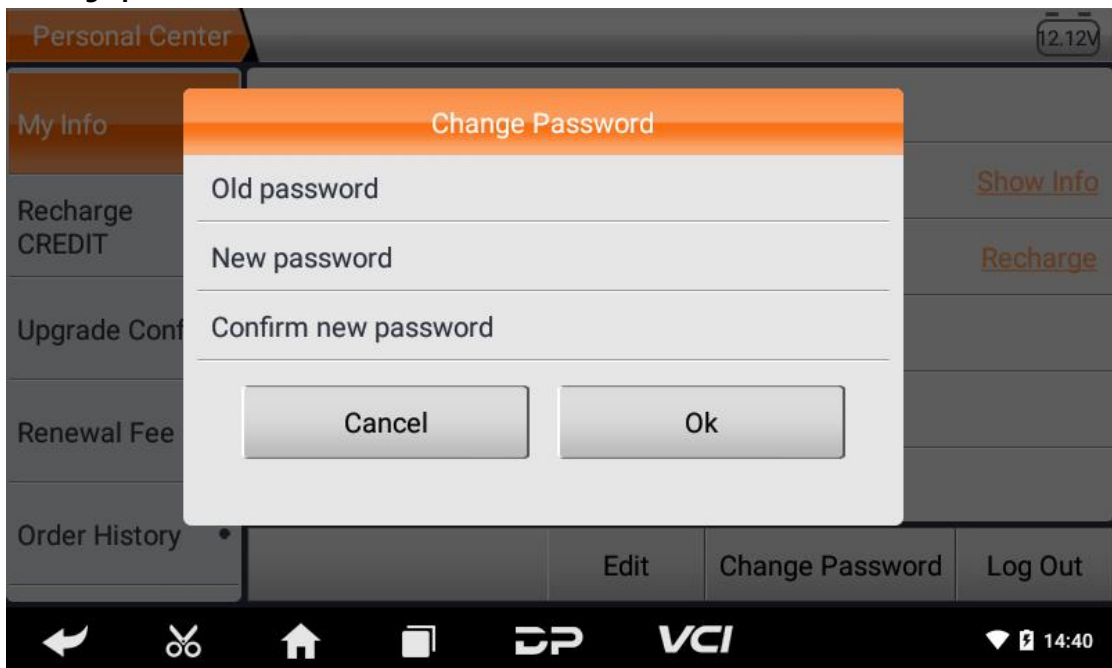


### 3.2.3 View distributor information

Click "View Distributor Information" to view the Distributor Contact Information.

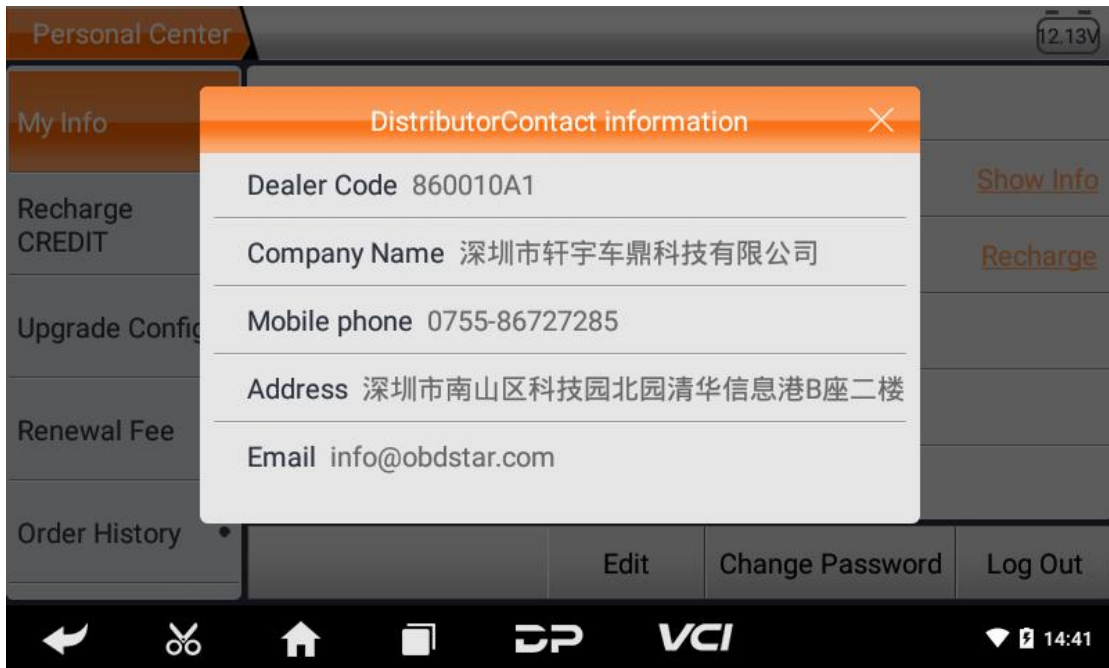

### 3.2.4 Recover password


Click on the forgotten password in the login interface to enter the password recover interface, fill in the relevant information to recover the password.

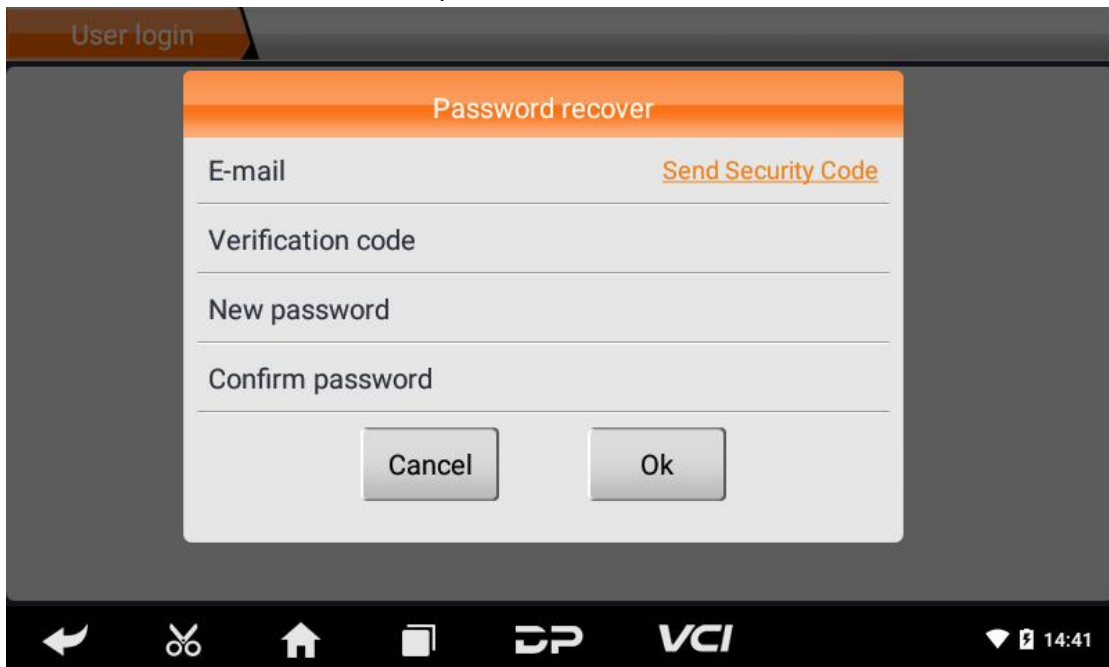

### 3.3 Recharge and expense


#### 3.3.1 Recharge CREDIT

Click "Recharge CREDIT" to recharge through 2 contact methods.

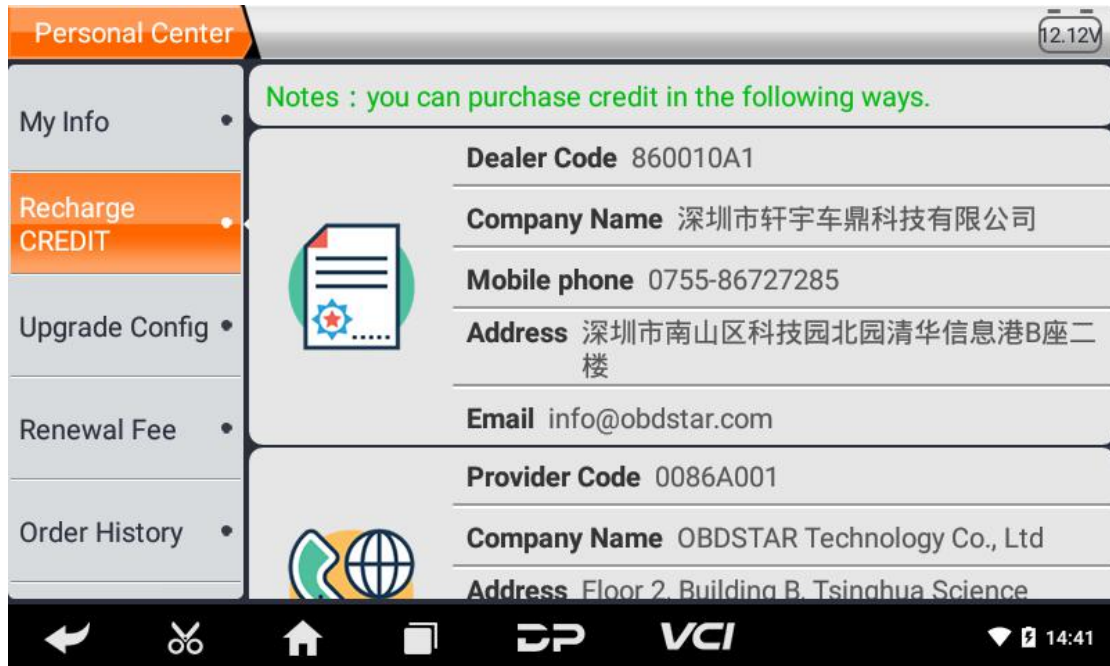

#### 3.3.2 Upgrade configuration

Click "Upgrade configuration" to upgrade the software configuration, you need to consume CREDIT.

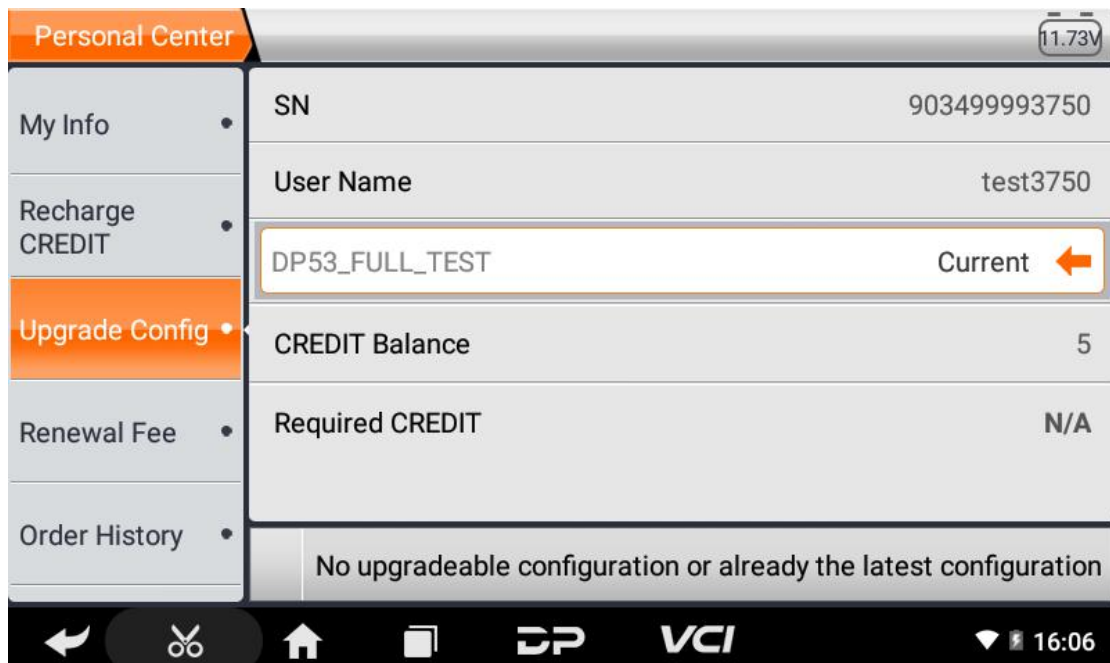

Click "View Configuration Contrast Information" to view the configuration table.

Configuration function comparison information

<input type="checkbox"/> HIDE THE SAME FUNCTIONAL COMPARISON	FUNCTION	DP53_CS_02	DP53_CS
SPECIAL	AEON DIAGNOSE	√	√
SPECIAL	HONDA DIAGNOSE	√	√
SPECIAL	PMGO DIAGNOSE		√



### 3.3.3 Renewal fee


Click "Renewal fee" to upgrade the software service years, you need to consume CREDIT.

**Personal Center** 0.0V


My Info	SN	903499993750	
Recharge CREDIT	User Name	test3750	
	Expiration date	[2021-10-19 00:00:00]	
Upgrade Config	+365 days	+730 days	+1095 days
	10	10	10
	CREDIT Balance	0	
Renewal Fee	Required CREDIT	10	
Order History			Recharge Upgrade

### 3.3.3 Order history

Click "Order history" to view the Order history.

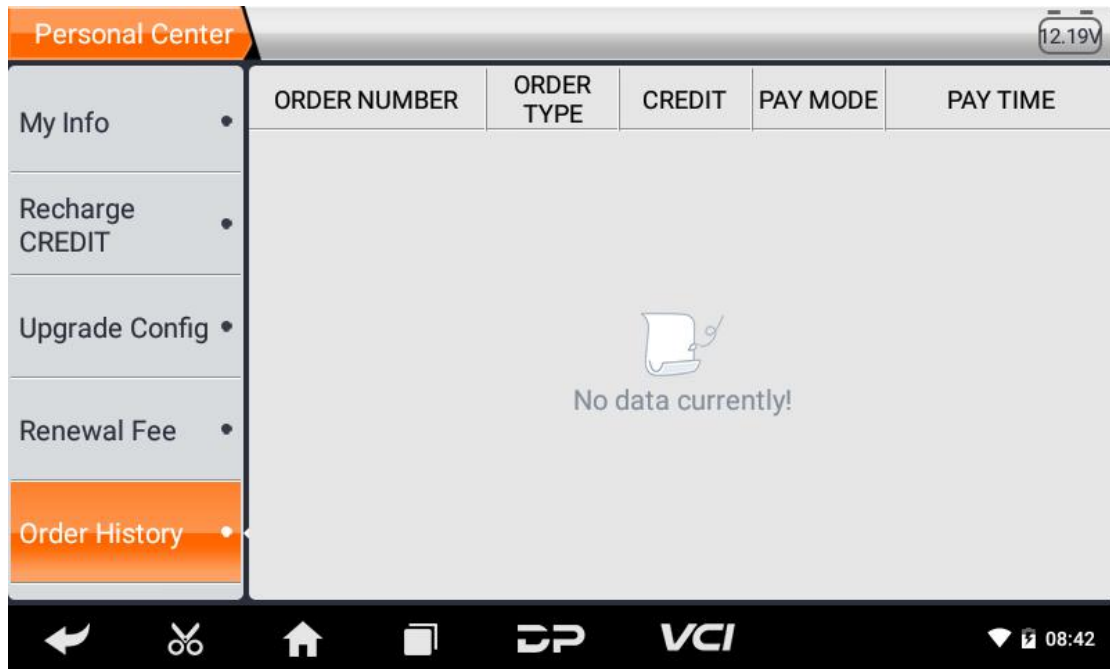

#### 4 Diagnostic Software Main Interface Introduction

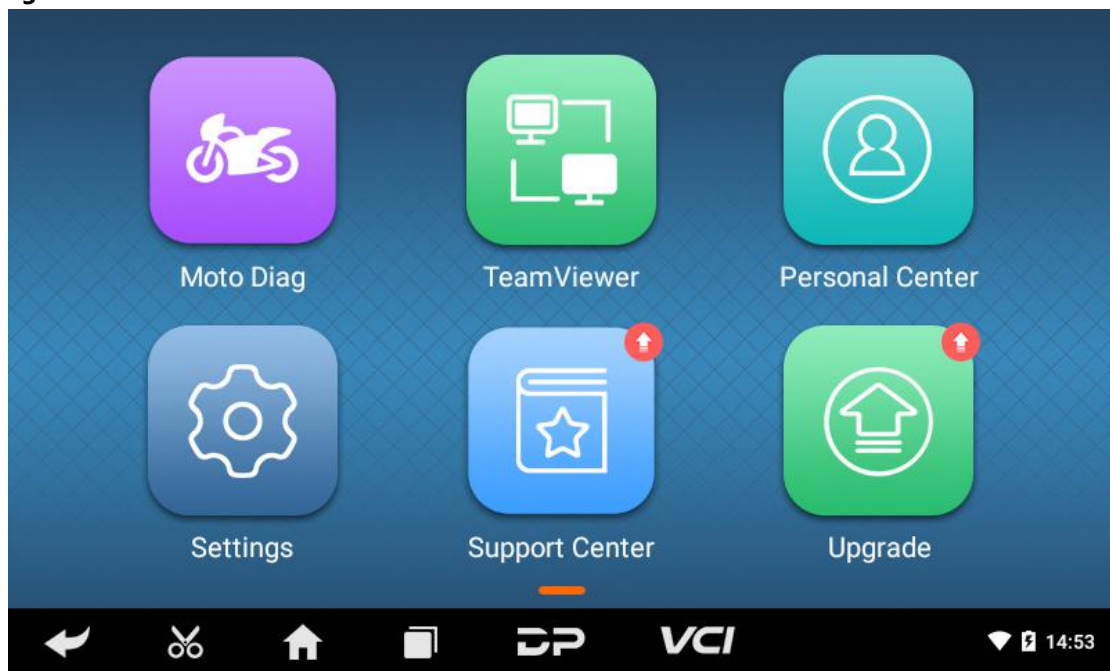

The main interface is divided into two pages, including the following functions:

Moto Diag: Enter the motorcycle diagnostic programming function.

Motorboat Diag: Enter the motorboat diagnostic programming function.

Moto IMMO: Enter the Moto IMMO programming function for programming.

Personal Center: new user registration, login; User details management, dealer information inquiry.

Remote assistance: Realize remote hosting operation.

Settings: It includes VCI information, language, unit, about, network test, DC Calibrate.

**Upgrade:** To download diagnostic software or upgrade diagnostic software to the latest version.  
**Support Center:** Provides abundant automotive technology, video data, handbook and repair case for your reference, and also including relevant information of this product.

### 5 START DIAGNOSING

Tap on the main menu screen, and then choose "Moto Diag" to enter the function selection and vehicle selection page. Enter the Favorites menu path by default, as shown in the figure below:



Click on the plus sign to enter the interface for selecting vehicle series and tick the square in the upper right corner to choose to add to favorites:







If you want to delete favorite vehicles from Favorites, click the minus sign and remove the ticked. You can see all the downloaded software of the machine configuration. The OBD II software is in each area by default and in the first position:

Hereinafter, take OBDII for example, to introduce how to start diagnosing.

Click on the icon of the "OBDII Engine" under the menu of other special functions. As shown in following photo:




To select software version, as following photo shown:



To enter diagnostic function menu, as following photo shown:




To select AUTO SCAN, as following photo shown:

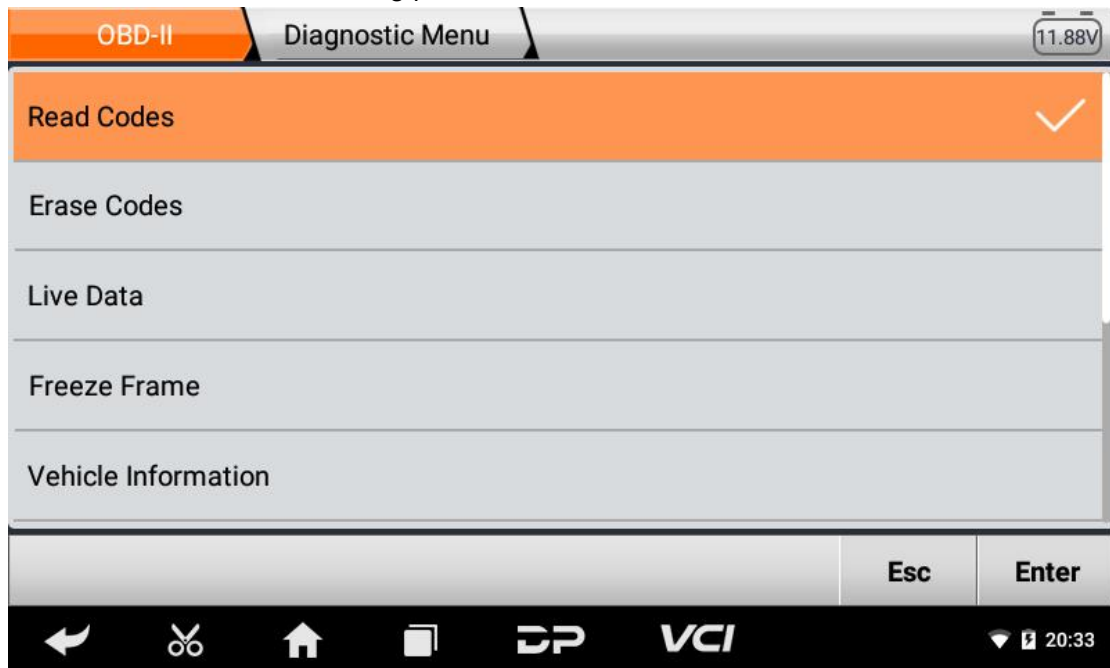


### 5.1 Read vehicle information

Tap "Read vehicle information", as following photo shown:

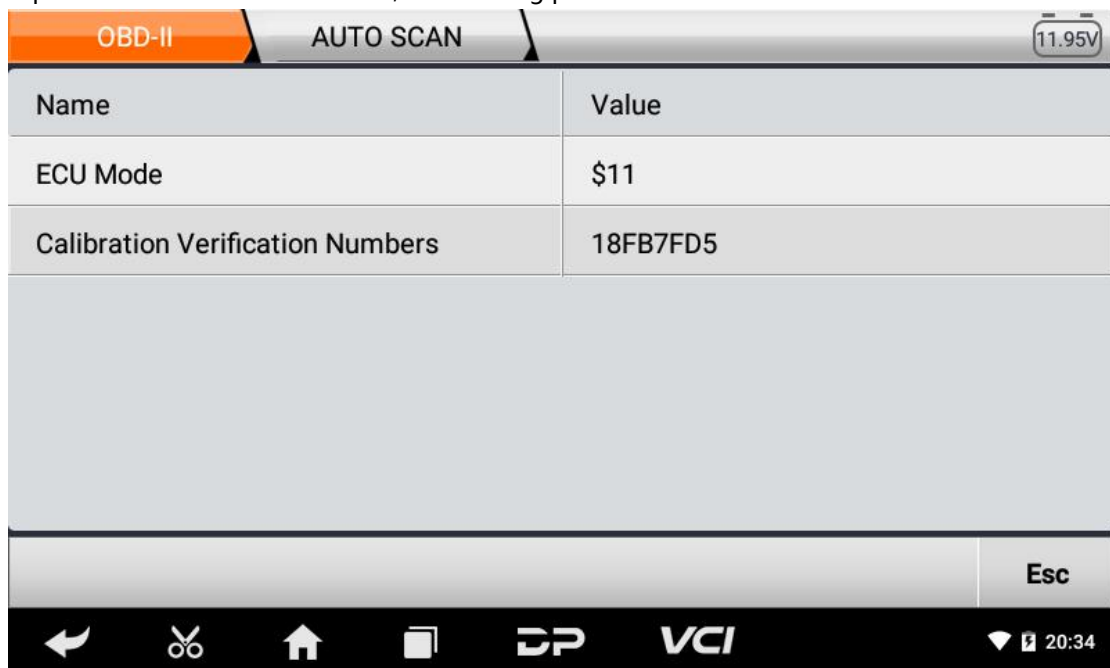


### 5.2 Read Stored Codes


Tap "Read Stored Codes" , as following photo shown:

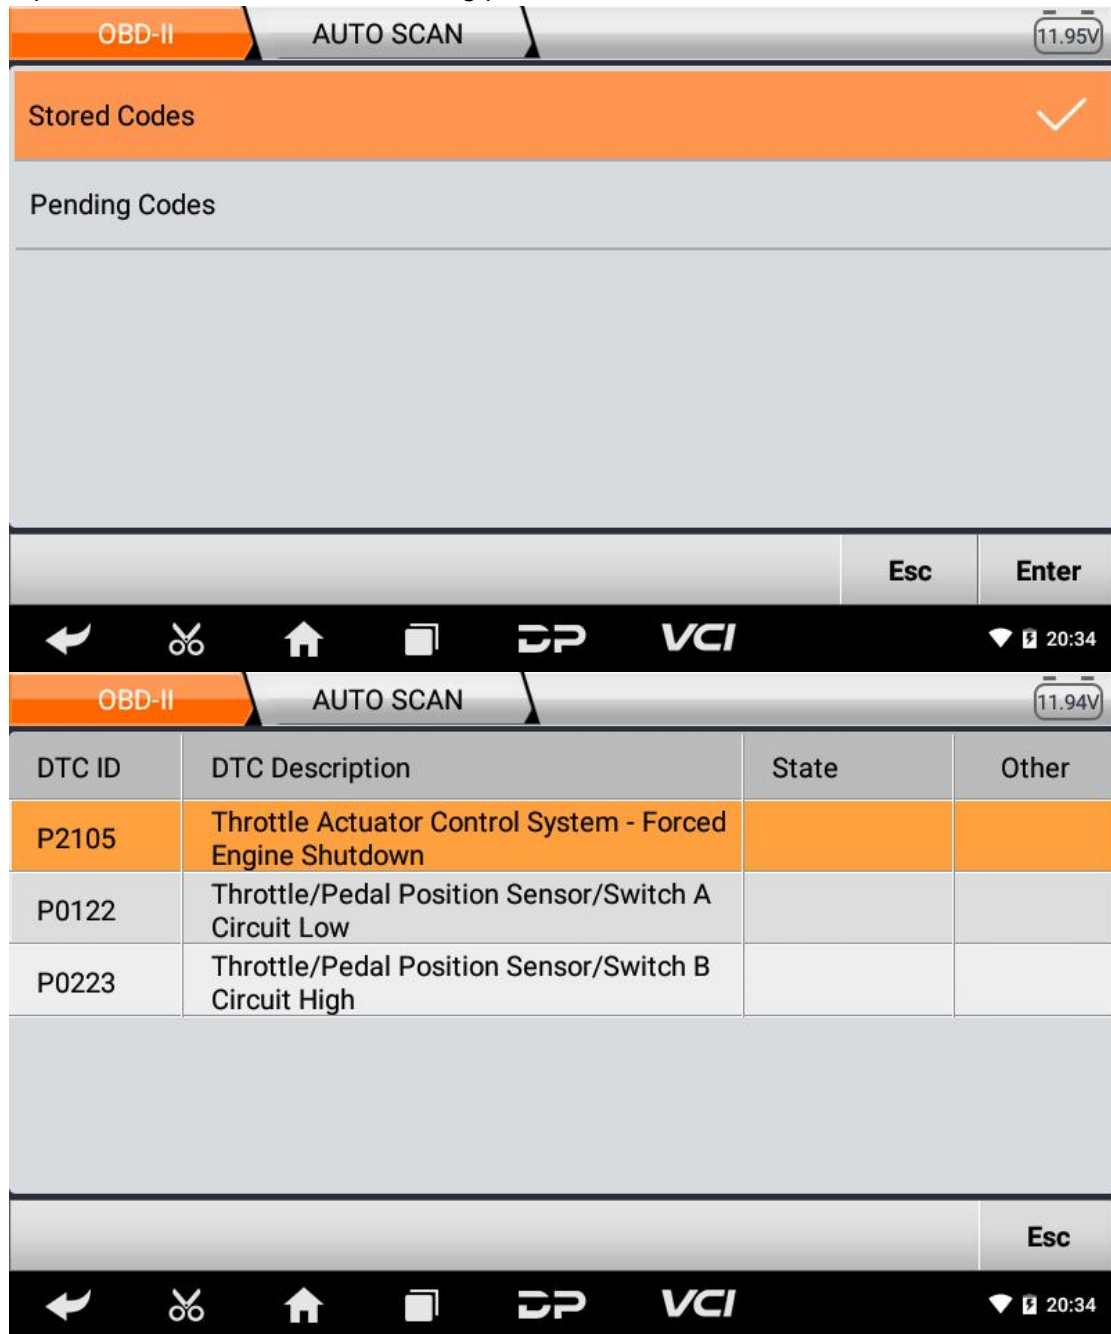

### 5.3 Clear trouble codes

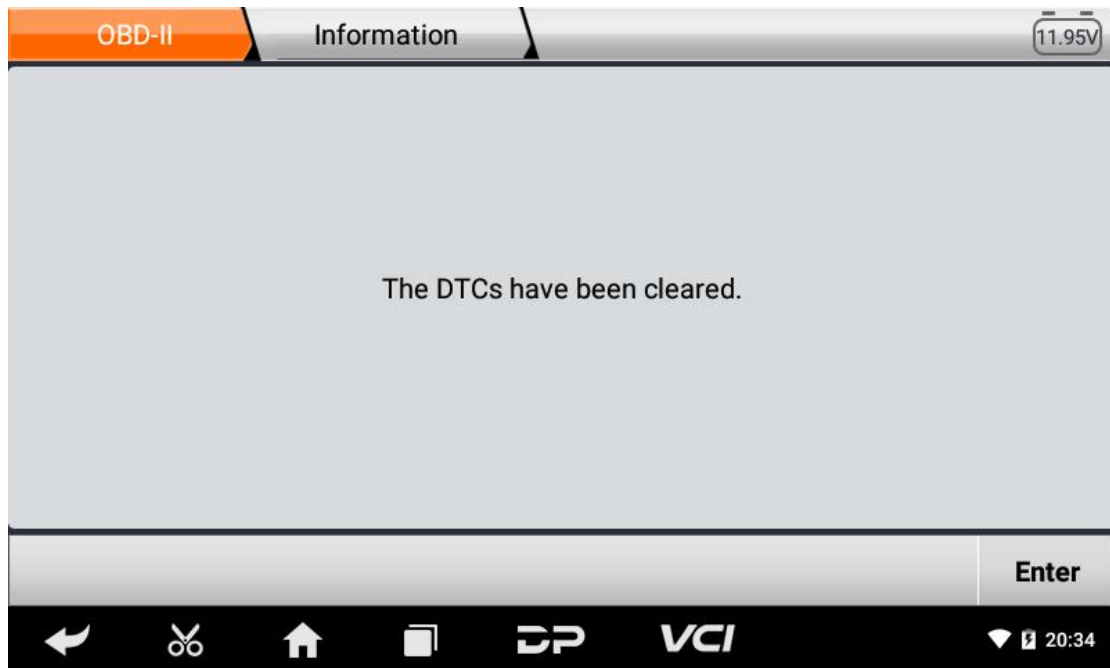

### 5.4 Read data stream

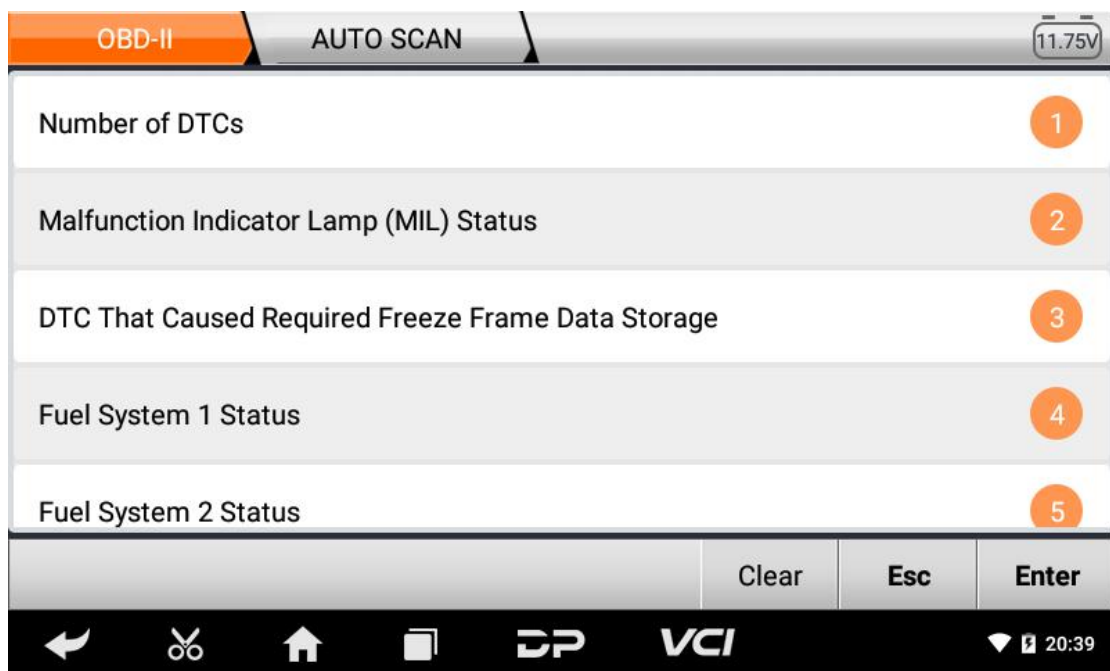

OBD-II		AUTO SCAN		11.71V
NO.	Data stream name	Value	Range	Unit
01	Number of DTCs	2		
02	Malfunction Indicator Lamp (MIL) Status	MIL ON		
03	DTC That Caused Required Freeze Frame Data Storage	P0122		
04	Fuel System 1 Status	Not Used		
05	Fuel System 2 Status	Not Used		

Esc

← ✂ 🏠 📁 DP VCI 🔋 20:39

## 6 SUPPORT CENTER

We have powerful maintenance database and detailed product introduction information.



### 6.1 VIDEO CENTER

Connect the diagnosis function operation videos of the actual vehicles;

### 6.2 Product Description

Introduce the instruction manual of this product, and exhibit the basic information of the equipment, diagnosis instructions, upgrades, other applications and additional explanations of

the company's products in the device.



### 6.3 FAQ

Summarize some common problems encountered in the use of the product;

### 7 SYSTEM SETTINGS

It includes VCI information, language, unit, Workshop information, user information and about etc.


#### 7.1 VCI information



## 7.2 Language



## 7.3 Unit

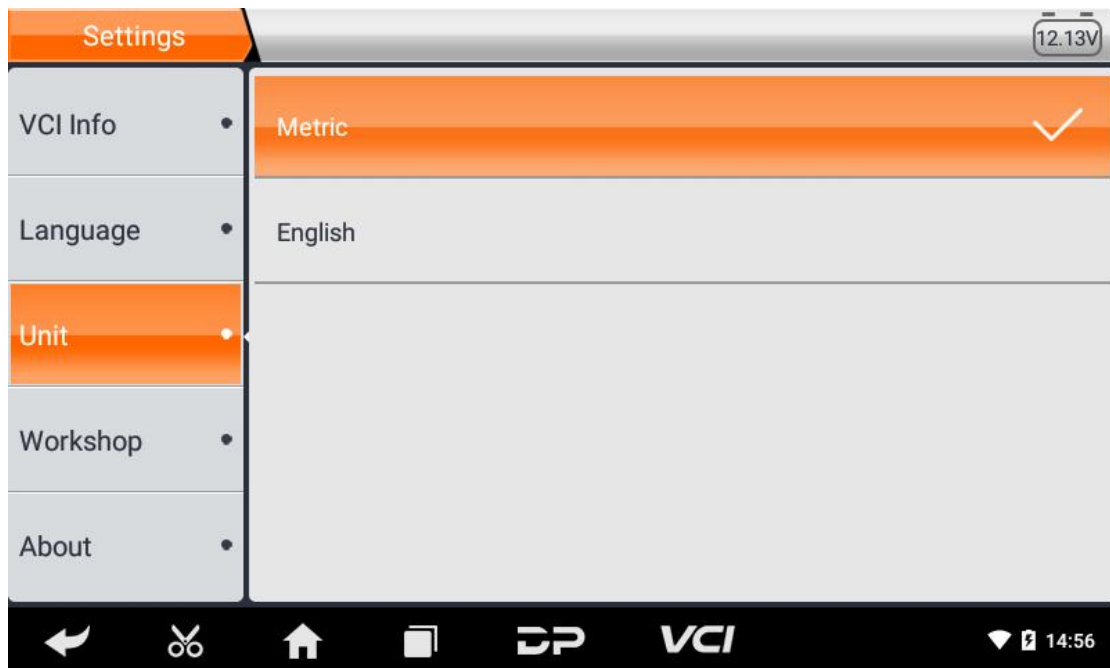



### 7.4 Workshop information

Settings 12.14V

VCI Info • Station Name

Language • Address

Unit • Post Code

Workshop • City

About • Province

Cancel Edit Save

← ✂ 🏠 📁 DP VCI 🔋 14:56

### 7.5 About

Settings 12.15V

Unit • Version v1.0.1

Workshop • Disclaimer

About • 1. Do not use the product before reading this Terms.  
2. Do not operate this product during driving to reduce traffic danger due to lack of concentration. OBSTAR shall not be liable for any traffic accident or economic loss arising from the use of this product.  
3. To make sure normal operation, do not use this product in places with strong electromagnetic interference (e.g. high voltage transmission and distribution equipment).  
4. OBSTAR shall not be liable for any direct or indirect damage to the product due to unauthorized modification or adding any component.  
5. This software is developed by OBSTAR Technology Co., Ltd. Software

Network Test •


DC Calibrate •

← ✂ 🏠 📁 DP VCI 🔋 14:56

Display software version updates and product announcements.


### 7.6 Network test

The network test function is convenient for network connection failure and other phenomena during the use process. The test logs are submitted and engineers can analyze the network status of the machine through the test logs.

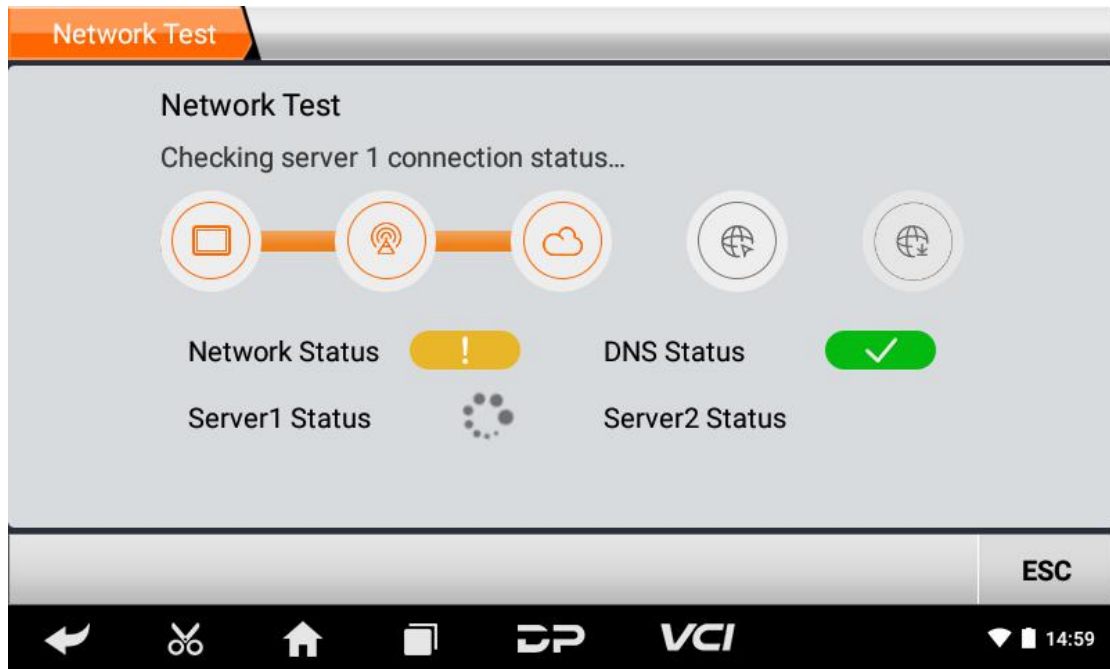


### 7.7 DC Calibrate

Voltage calibration is performed when the voltage is abnormal:

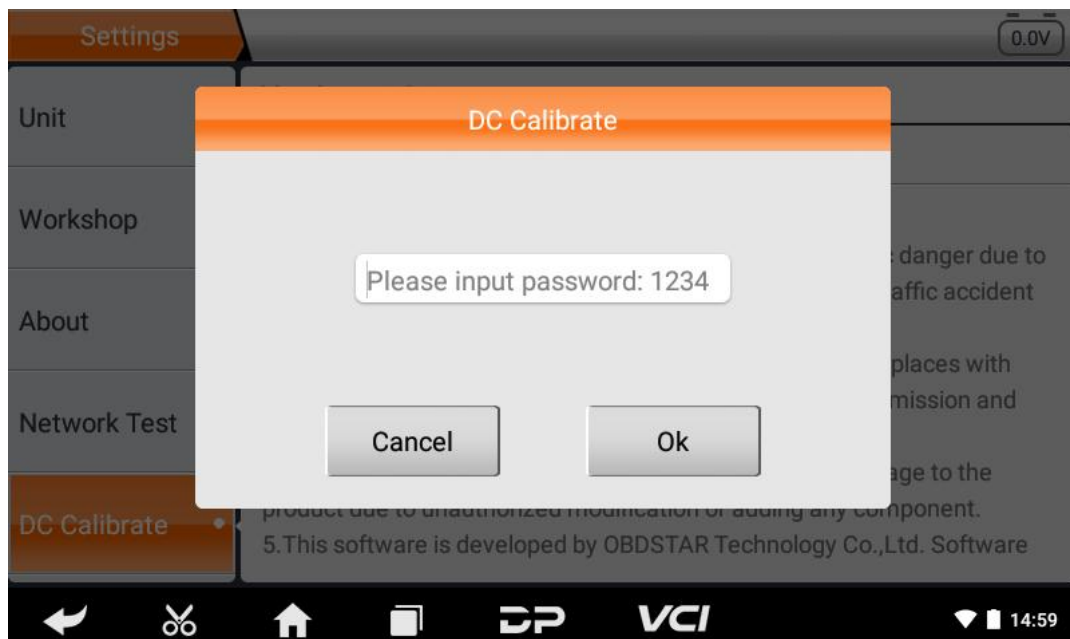


Enter the PinCode to access:

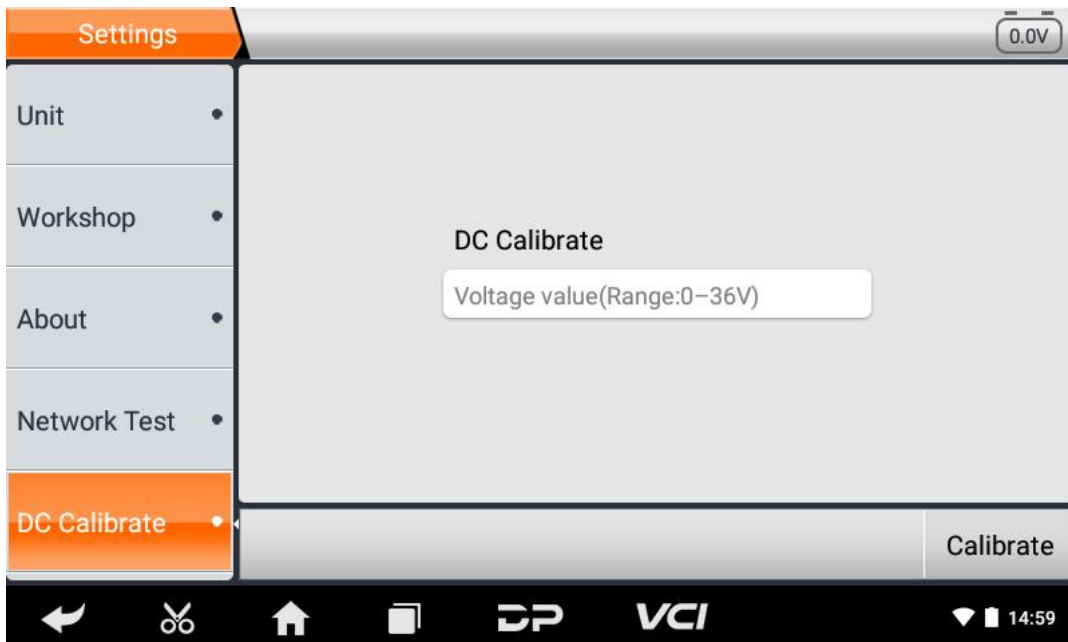

Enter the correct voltage for calibration. When it is completed, display the correct voltage value in the upper right corner of the diagnostic programming interface.

## 8 REMOTE ASSISTANCE

This application can realize remote hosting operation via the Third Party' s software: Quick Support.

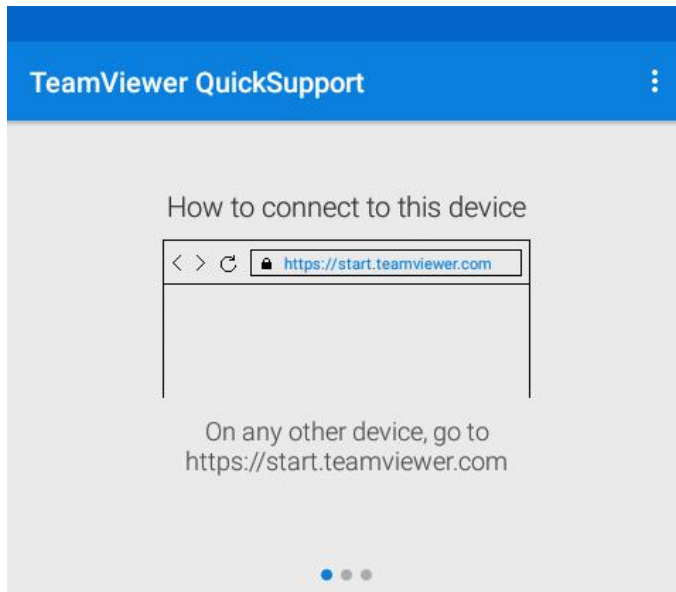

Your ID **648 799 858**


SEND MY ID...

● Ready to connect (secure connection)




### 1 Detection System Upgrade

The system APK automatically detects the version. If there is a version update, a red dot is in the upper right corner of the upgrade button. Click on the upgrade button to prompt "Whether to upgrade software?" :

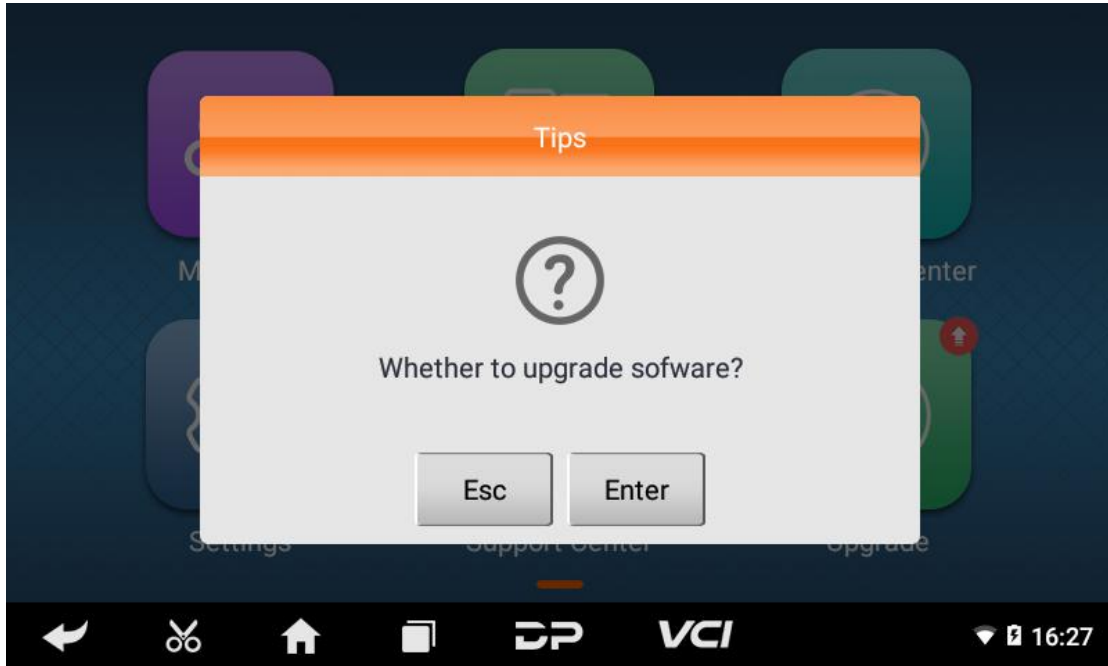


If not, click “Esc” , you will directly return to the main interface. However you cannot enter the upgrade diagnosis application interface.

Click on the APK upgrade and it prompts to install:

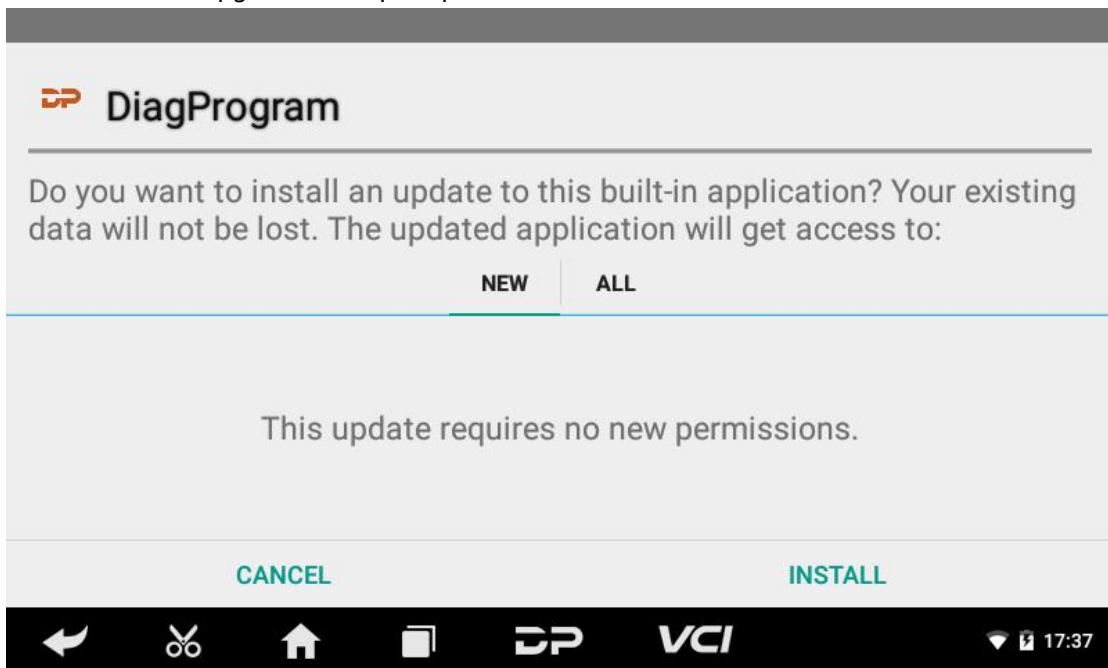

Click on the installation and perform the program installation, automatically close the program and install.

After installation, click on the program image to re-enter the DP program:

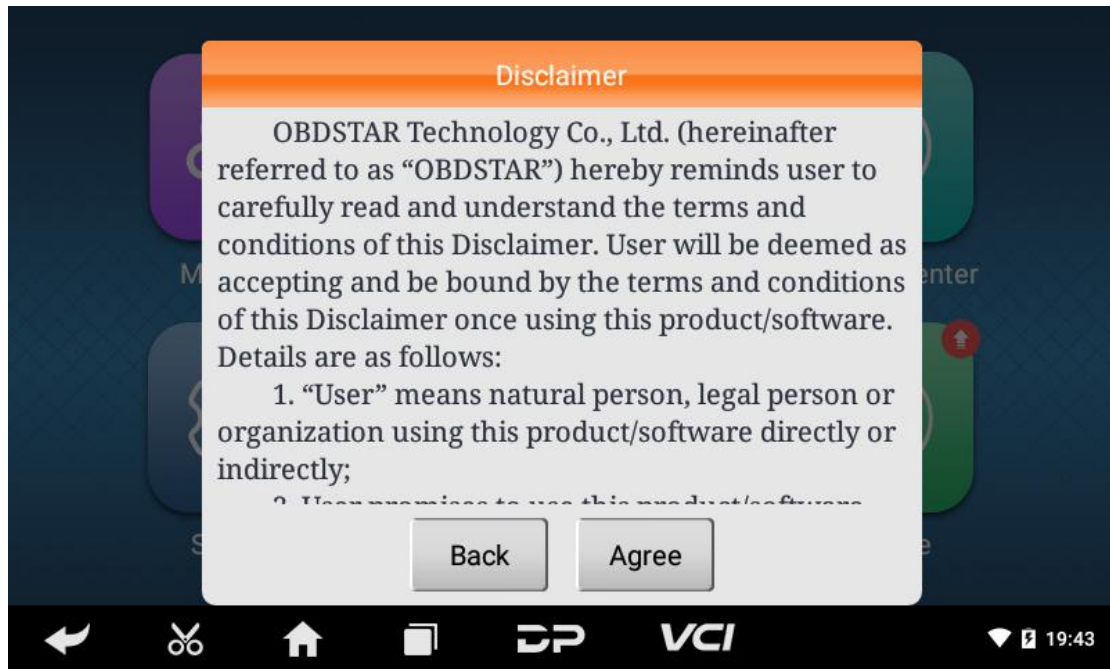

Re-enter the main interface and prompt statement.

(Notes: Ensure Internet connection is normal when updating.)

## 2. Diagnostic Function Upgrade

Download and upgrade software by "Bulk Update"

Upgrade						
<input type="checkbox"/>	Software name	Local latest version	Latest version	Downloadable	0/32	Bulk Update
<input type="checkbox"/>	BENELLI	—	30.01	30.01 ▼		Ready to download
<input type="checkbox"/>	BENELLIDSK	29.00	30.01	30.01 ▼		Ready to download
<input type="checkbox"/>	BMW	29.97	30.01	30.01 ▼		Ready to download
<input type="checkbox"/>	HONDA	—	30.01	30.01 ▼		Ready to download
<input type="checkbox"/>	INDIAN	29.92	30.00	30.00 ▼		Ready to download
<input type="checkbox"/>	KYMCO	—	30.01	30.01 ▼		Ready to download
<input type="checkbox"/>	MONTESA	—	30.01	30.01 ▼		Ready to download

Tap main screen "Bulk update" , start downloading and upgrading

<input checked="" type="checkbox"/>	Software name	Local latest version	Latest version	Downloadable	0/32	Bulk Update
<input checked="" type="checkbox"/>	BENELLI	–	30.01	30.01	33.7% [1/3]	
<input checked="" type="checkbox"/>	BENELLIDSK	29.00	30.01	30.01	28.3% [1/3]	
<input checked="" type="checkbox"/>	BMW	29.97	30.01	30.01	26.5% [1/3]	
<input checked="" type="checkbox"/>	HONDA	–	30.01	30.01	49.4% [1/3]	
<input checked="" type="checkbox"/>	INDIAN	29.92	30.00	30.00	Ready to download	
<input checked="" type="checkbox"/>	KYMCO	–	30.01	30.01	Ready to download	
<input checked="" type="checkbox"/>	MONTESA	–	30.01	30.01	Ready to download	

If a software needs to be canceled, just tap the corresponding Check Box.

You can search for the updated model required in the search box (Fuzzy Search function). As following photo shown:

<input type="checkbox"/>	Software name	Local latest version	Latest version	Downloadable	0/2	Bulk Update
<input type="checkbox"/>	HONDA	–	30.01	30.01	Ready to download	
<input type="checkbox"/>	HONDA(Datas)	–	10.01	10.01	Ready to download	

After the upgrade is completed, you can enter the diagnostic programming to view the upgrade version description and the version number, and you can perform related diagnostic operations and functions.

(Notes: Ensure Internet connection is normal when updating. Besides, because of many software, it may take several minutes, please wait patiently.)

## 1 WLAN

This function enables you to enjoy surfing on the Internet and downloading data from the Internet via Wi-Fi.

### 1.1 Set WI-FI on

1. Enter main menu screen, choose "Settings" > WLAN
2. When the WLAN sign appears blue, it indicates Wi-Fi has been activated already.

Note: To prolong the battery life, please switch Wi-Fi off when it keeps unattended.

### 1.2 Connect to WLAN

Start WLAN, if this device is within range of WLAN, it can automatically detect and connect to current WLAN, select desired network and input password, then you can surf the Internet by WLAN.


## 2 Browser

You can use any APP based on browser website and network.

### 2.1 Open the browser

Enter main menu screen, tap to OBSTAR the browser. You can choose the desired homepage or input the website address to browse.

1. Tap to input or edit the web link

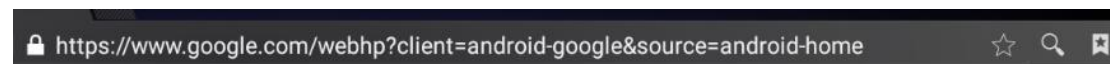

### 2.2 Browser webpage

1. Open the browser.
2. Input the web address, and tap "Go" on the keyboard to visit the website.  
Tips: Alternatively, you can also tap, and then choose "Bookmarks/History" from the pull-down list to choose the web link you want to access.
2. After a webpage is open, slide the screen with the tip of your finger to view other hidden content.

### 2.3 Zoom in/Zoom out a page.

There are two ways to zoom in/ zoom out while browsing a webpage.

- To zoom in so that the text on a webpage appears in a column that fits your device' s screen, double-tap with the tip of your finger.
- To zoom in manually, place two fingers on the screen and then spread them apart. To zoom out, either double-tap again or place two fingers apart on the screen and then pinch them together.

### 2.4 Save favorite webpage to bookmark

1. While browsing a webpage, tap Function Menu at the top right and choose "Save to bookmarks" .
2. Edit a label for the bookmark.
3. Tap "OK" to confirm and save it.



## 2.5 Open multiple pages

The browser allows you to open multiple web pages and you can toggle between these pages.

1. While browsing a webpage, tap the Fold Button at the top right and open new window.
2. Another web page will be displayed in the new window.

## 2.6 Customize Internet settings

While browsing a webpage, choose "Settings" at the top right, you can view or change browser settings, privacy & security setting and advanced setting etc.

## 3 GALLERY

This option is used to manage pictures and video files.

### 3.1 Open gallery

Enter main menu screen, tap "Gallery" to access it. The system searches images and videos in this device and SD card automatically, and categorizes it into corresponding folders.

### 3.2 Browse images

1. Enter main menu screen, tap "Gallery" .
2. Tap the picture folder you want to view.
3. Tap the desired image to browse.
4. Swipe the screen rightwards or leftwards to view the next/previous picture.

## 4 MUSIC

Music files are stored into 4 categories: Artists, Albums, Songs and Playlist. Tap the desired music to display music.

Tips: While playing, tap back button to switch to other applications and the player will be running in background. Open the status bar and choose the audio file to return to the player screen.

## 5 CALCULATOR

You can use calculator to operate algorithm of plus, subtract, multiply and divide, and function operation of sin, cos, tan and log.


## 6 CALENDAR

This function lets you view calendar or create to-do events.

Enter main menu screen, tap "Calendar" . Swipe up and down to switch to month;

Tap someday, the followings can be done.





Tap  to refresh, search, and hide control and setting.


## 7 ALARMS

### 7.1 Add an alarm

1. Enter main menu, and tap "Alarm" .

2. Tap  to add alarms.
3. Set the detailed information of the alarm.
4. Tap  to pack up the alarm to store the setting.

### 7.2 Delete an alarm






1. Enter main menu, and tap "Alarm" .
2. Tap the desired alarm.
3. Tap  to delete it.

Tips: After the alarm is deleted, you can choose to cancel delete alarm on the right side from the option menu.

### 7.3 Customize your alarm






1. Enter main menu, and tap "Alarm" .
2. Tap menu button, and then choose "Settings" .
3. Alarm volume: Set the volume of alarms.
4. Set the duration of alarm.
5. Set the duration the alarm snooze next time.
6. Volume buttons: set what these buttons function when pressed during an alarm.
7. Set default ringtone: choose the alarm ringtone.

### 7.4 Countdown set

1. Enter the main menu to tap  to choose count down alarm;
2. Set the time of countdown;
3. Tap  to add count down alarm, and tap  to delete alarm;
4. Tap  to start count down, and tap  to stop count down;

Notice: after the countdown ends, the device will ring alarm sound.

### 7.5 Second clock setting

1. Enter the main menu to tap  to choose second clock;
2. Tap  to start second and clock, and tap  to stop second clock;
3. Tap  to reset second time;
4. Tap  on the right side to display the smaller unit counter of second clock;

## 8 ES FILE VIEWER

Open ES file viewer, and enter main menu.

You can manage SD card, browse by category and browse all music, picture, video, document application, package, favorites, installation package, management recommended through catalogue.

## 9 BRIGHTNESS

1. Enter main menu screen, tap "Settings" > "Display" .
2. Tap "Brightness" to enter.
3. Drag the slider leftward to lower the screen brightness. Drag the slider rightward to increase the screen brightness.

## 10 SET SCREEN LOCK

You can set the screen lock pattern, and when the screen is locked, it will not be unlocked until you draw the right pattern.

1. Enter main menu screen, tap "Settings" > "Security" > "Screen lock" .
2. There are several options available for your selection. To define a pattern, follow the on-screen prompts to plot your pattern.
3. After drawing, tap "Confirm" to save your setting.

## 11 APPLICATION

### 11.1 View installed applications

1. Enter main menu screen, tap "Settings" > "Apps" to open the downloaded application list.
2. The following operations are available:
  - Tap the desired one to view the application information.
  - Tap and choose "Sort by size" from the pull-down menu, the applications will be displayed in size order automatically.
  - Tap and choose "Reset app preferences" from the pull-down menu, a confirmation dialog box will appear on the screen, tap "Reset apps" to proceed; tap "Cancel" to abort.
3. To uninstall an application, tap it to enter the application information screen.
4. Tap "Uninstall" and then follow the on-screen instructions to finish it.

### 11.2 View the running applications

1. Enter the main menu screen, tap "Settings" > "Apps" . Scroll the screen from right to left to RUNNING tab to open the currently running application list.
2. The following operations can be done:
  - View the currently running applications;
  - Tap any one to stop it.

## 12 LANGUAGE&INPUT METHOD

1. Enter the main menu screen, tap "Settings" > "Language & input" > Tap language.
2. Tap "Language" and choose the desired language in this device.

The setting of input method

The device provides several kinds of input methods. Tap setting before the desired input method.

### 13 SET DATE&TIME

This device is preset to use the network-provided date, time zone and time.

Note: If Automatic date & time is set as Use network-provided time, date, time and time zone will not be defined.

1. Enter the main menu screen, and tap "Settings" > "Date & time" .
2. Tap "Set date" , and scroll the screen upwards and downwards until the desired numbers appear on the highlight area.
3. Tap "Select time zone" , and choose the desired one from the time zone list. Scroll the screen upwards and downwards to view more.
4. Tap "Set time" and scroll the screen upwards and downwards to adjust the hour and minute. After setting, tap "Done" to confirm.
5. Select or deselect "Use 24-hour format" to switch between 12-hour format and 24-hour format.
6. Tap "Choose date format" to choose the desired date of this device format from the list.

### 14 RESTORE KEY MASTER TO FACTORY SETTINGS

This option enables you to restore this device to the default factory settings.

Once it is reset, all data (including downloaded applications) will be deleted.

Note: Before resetting to factory data, please back up all important data saved in your device.

1. Enter the main menu screen, tap "Settings" > "Backup & reset" > "Factory data reset" .
2. Follow the instructions on the screen to proceed.1. Enter main menu screen, choose "Settings" > WLAN

### 15 STORE

Enter the main menu, and tap setting> store check the store situation of the device.

Store the download content in the default browser to the download content list.

### 16 APPS INSTALLATION/ UNINSTALLATION

1. Install: Put the application package under the root directory of SD card, enter "File Manager" and then tap the desired package to start installing.
2. Uninstall: Tap "Settings" > "Apps" , and choose the desired one to uninstall.

### Copyright Information

Copyright 2017 by OBSTAR Technology Co.,Ltd. (called OBSTAR for short) all rights reserved.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise) without prior written permission of OBSTAR (hereinafter referred to as OBSTAR).

The information contained herein is designed only for the use of the unit. OBSTAR is not responsible for any consequences arising from its use in guiding the operation of other

equipment. This manual and all examples contained herein are subject to change without prior notice.

Neither OBDSTAR nor its affiliates shall be liable to the purchaser of this unit or third parties for damages, losses, costs, or expenses, incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this unit or unauthorized modifications, repairs, or alternations to this unit, failure to strictly comply with OBDSTAR operating and maintenance instructions.

OBDSTAR shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as original OBDSTAR products or the products approved by OBDSTAR.

Official statement: The names of other products mentioned in this manual are intended to explain how this equipment is used, and the registered trademark ownership still belongs to the original company.

This equipment is for use by professional technicians or maintenance personnel.

### **Trademark Information**

OBDSTAR is a registered trademark of OBDSTAR Technology Co., Ltd. (called OBDSTAR for short) in China and other countries. In countries where any of the OBDSTAR trademarks, service marks, domain names, logos and company names are not registered, OBDSTAR claims other rights associated with unregistered trademarks, service marks, domain names, logos, and company names. Other products or company names referred to in this manual may be trademarks of their respective owners. You may not use any trademark, service mark, domain name, logo, or company name of OBDSTAR or any third party without permission from the owner of the applicable trademark, service mark, domain name, logo, or company name. You may contact OBDSTAR by visiting the website at [www.obdstar.com](http://www.obdstar.com), or writing to OBDSTAR Technology Co., Ltd., 2nd Floor, building B, Tsinghua Information Port, Songpingshan Street, Nanshan district, Shenzhen, Guangdong, China, to request written permission to use Materials.

### **Safety Precautions**

Before using this device, please read the following safety information carefully. For more detailed information, see the appendix "Safety Warnings and Precautions."

1. Never collide, throw, or punch this device, and avoid falling, extruding and blending it.
2. Do not use this device in exceptionally cold or hot, dusty, damp or dry environments. In places where this device is forbidden or using this device may cause interference or generate a potential risk, please turn off it.
3. Do not use this device while driving.
4. At medical sites, please observe the relevant regulations or rules. In areas close to medical equipment, please turn off this product.
5. Turn off this device before boarding any airplane.
6. Never place this device into apparatus with strong electromagnetic field.
7. Do not dismantle this device by yourself. If there is any inquiry, please contact the dealer.
8. Do not place the product and accessories in appliances with strong electromagnetic fields.
9. Keep this device far away from magnetic devices because its radiations may erase the data

stored on the devices.

10. Do not use this device in high temperature and other environment with flammable gas, such as gas station.
11. Store this device out of the reach of children and do not allow children to use it in unsupervised state.
12. Please use the included battery and charger. Otherwise, explosion may happen.
13. Adhere to laws and regulations, respect people's privacy and legal rights, during operating this device.

### **Precautions On Using This Device**

The ignition switch should be OFF while plugging or unplugging the diagnostic connector.

### **Precautions for ECU Operation**

1. Do not disconnect the inner consumer when the ignition switch is on. High voltage transients may encounter at the moment of disconnecting, which may damage the sensors and the ECU.
2. Keep the computer away from magnetic object.
3. Do not cut off the power supply of ECU system before welding on the vehicle.
4. Pay more attention to the ECU and the sensors when the operation is next to them.
5. Ground yourself when you disassemble PROM, otherwise, ECU and sensors will be damaged by static electricity.
6. Do not connect ECU harness connector firmly, otherwise, electronic elements, such as IC inside ECU, will be damaged.

### **Safety warnings and cautions**

Before using and operating the device, please read and observe the following precautions to avoid dangerous or illegal conditions and to ensure the best performance of this device.

### **Medical equipment**

1. In the express provision for medical and health care facilities that prohibit the use of wireless equipment, please comply with the provisions of the premises to shut down this device.
2. Radio waves generated by this device may affect the normal operation of implantable medical devices or personal medical devices such as pacemakers, implantation of cochlea, hearing aids, etc. If you are using these medical devices, consult your manufacturer for restrictions on the use of this device.

### **Flammable and explosive area**

1. Do not use this device at the gas station (repair station) or near flammable materials or chemicals, and follow all graphic or text instructions. This device may cause an explosion or fire in or around the fuel or chemical storage and transport area or in an explosive area.
2. Do not store or transport the equipment and its accessories in flame or flammable liquids, gases or explosive materials in the same box.

### **Traffic safety**

1. Do not hold this device while driving and comply with the regulations in your area or country.
2. The wireless device may interfere with the aircraft's flight system, please comply with the relevant provisions of the airline, in the ban on the use of wireless equipment, please turn off this device.

### **Operating environment**

1. Do not charge or use this device in a dusty, humid, dirty, or near magnetic field to avoid malfunction of the internal circuit of the device.
2. Do not use this device during lightning storms to avoid lightning or other damage.
3. Turn off this device where it is expressly prohibited to use the wireless device.
4. When this device is powered by the power adapter, the choice of the altitude of the product is determined by the matching adapter. For the tropical environment temperature condition, keep the ambient temperature from 0 °C to 40 °C. When this device is powered by the battery, keep the ambient temperature from -10°C to 40 °C. Do not use the above temperature range, when the ambient temperature is too high or too low, may cause a malfunction.

### **Child health**

1. This device and its accessories may contain small parts, please place them in places where children are not accessible.
2. Children may unintentionally damage this device and its accessories, or swallow small parts to cause suffocation or other hazards.

### **Environmental protection**

Please comply with local laws and regulations regarding device, batteries and their accessories, and support recovery operations. Do not dispose of device, batteries and their accessories as ordinary household waste.

### **Original accessories**

Use only original accessories provided by the device manufacturer. If you use any non-original accessories, are likely to affect the performance of this device, in violation of the warranty terms of this device and the country on the communication terminal products, the relevant provisions, and even lead to personal harm.

### **Use batteries and chargers**

1. When the charge is complete, disconnect the device from the power outlet device.
2. Do not connect the metal conductor to the battery, or contact the end of the battery to avoid short circuiting of the battery, as well as physical damage caused by burnout due to overheating.
3. Do not place the battery or device around the heating equipment, such as a microwave oven, oven or radiator.  
Batteries may explode when overheated.
4. Do not disassemble or modify the battery to prevent the battery from leaking, overheating,

igniting or bursting.

5. If the battery leaks, do not expose the skin or eyes to the leaked liquid; if it gets on the skin or eyes, rinse immediately with water and go to the hospital for medical treatment.
6. If the charger's cable is damaged, do not use it to avoid electric shock or fire.
7. Do not throw the battery into the fire, otherwise it will cause the battery to fire and burst.

### **Repair and maintenance**

1. Keep this device and its accessories dry. Do not use a microwave oven or other external heating equipment to dry it.
2. Do not subject this device and its accessories to strong shock or vibration to avoid damage to the equipment and its accessories or to cause the battery to explode.
3. Do not place the unit or its accessories in too high or low temperatures. Doing so may cause device, batteries and chargers to malfunction, fire or explode. When the temperature below 0 °C, the battery performance will be limited.
4. Do not use potent chemicals, cleaning agents or strong detergent cleaning device or accessories. Before cleaning and maintenance, please shut down and disconnect the charger.
5. Do not disassemble device and accessories, otherwise the device and accessories will not be covered by our warranty.
6. If the device collides with a hard object or the device is strongly impacted by the outside, the screen is broken, do not touch or attempt to remove the broken part, stop using it immediately and contact the specified service point in time.

### **Warranty**

The warranty is only applicable to users and distributors who purchase OBDSTAR products through normal procedures.

Within one year from the date of delivery, OBDSTAR electronic products due to material or process defects caused by warranty, due to abuse, unauthorized changes, for non-product design purposes, not in accordance with the provisions of the manual Operation, etc., resulting in damage to the device or components are not covered by this warranty.

### **Waiver statement**

The above warranty can be substituted for any other form of warranty.

### **Order notification**

Replaceable parts and optional accessories can be ordered directly from the OBDSTAR authorized supplier, please specify when ordering:

- Order quantity
- Serial number
- Part name

### **Customer service center**

If you encounter any problems during the operation, please call the Service Hotline:



0086-755-86707161.

When the device needs repair, please send it to OBDSTAR Technology Co., Ltd., together with the purchase invoice and problem description. If the device is within the scope of the warranty, OBDSTAR will provide free maintenance; if the device is not in the warranty, OBDSTAR will charge maintenance and return freight.

OBDSTAR Technology Co., Ltd. Address:

Floor 2, Block B3, Junfeng Industrial Park, Chongqing Road, Peace Community, Fuhai Street,  
Baoan District, Shenzhen, China  
518000 China

### **Declaration**

OBDSTAR reserves the right to change the product design and specifications without notice. Physical appearance and color may be little different from the one shown in the instruction, please take the device as the standard. We have made every effort to make all the description of the book accurate, but still inevitably inappropriate, if in doubt, please contact the dealer or OBDSTAR after-sales service center, the company does not bear any consequences due to misunderstanding.